


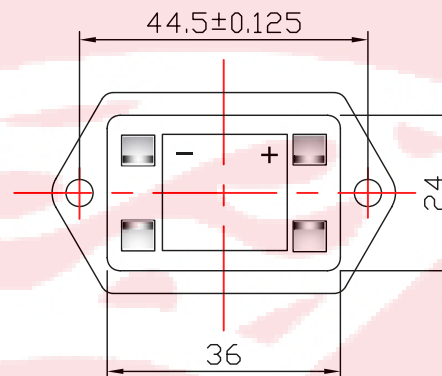


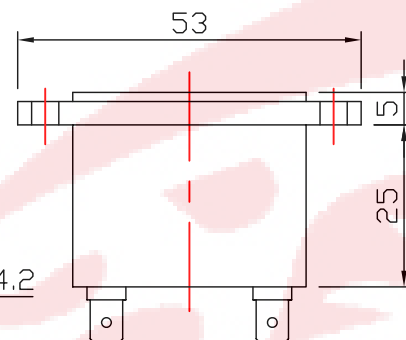


紹興華臻電子有限公司
SHAOXING HUA ZHEN ELECTRONIC CO., LTD

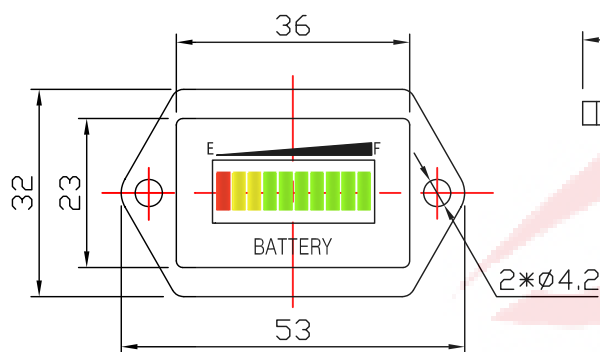

Panel Cutout

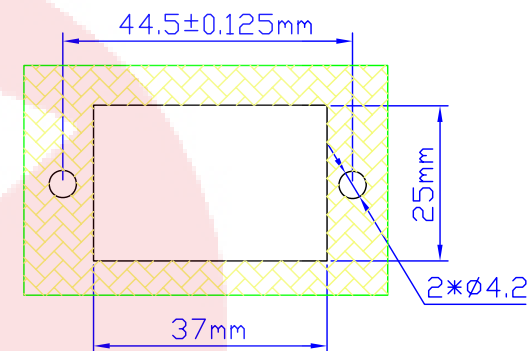


HT0624H Wiring

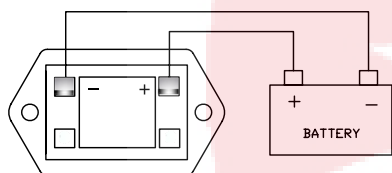


Directly connect to battery sets.

HT0624HC Wiring - LED Enable

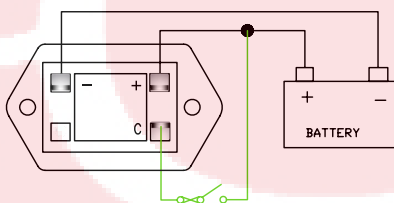

Control pin: connect to the ignition switch via fuse.

HT0624HRC Wiring Diagram

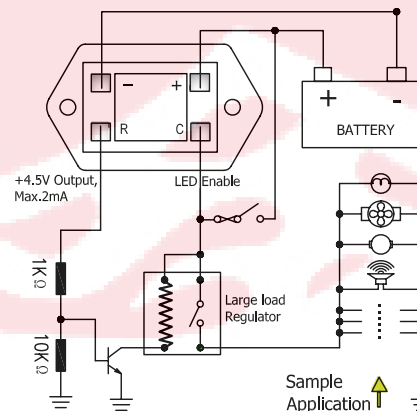

C (LED Enable):
When terminal C is applied and pin +&- connected, instrument works, but LED doesn't display. LED is enabled by connecting terminal C to high voltage (e.g. illumination switch).

R (+4.5V Output, Lockout):
R terminal has +4.5V output, and it cuts off the output when instrument detects that the battery is empty when #1&2 LED flash in turns.



Thinking of the environment before printing this file.

All details in this file is highly confidential. Unauthorized usage, dissemination, distribution, copying of this file without permission of SHAOXING HUAZHEN Electronic Co.,Ltd is to be subject to legal privilege under the regulations of SHAOXING HUAZHEN Electronic Co., Ltd.