


Directly connect to battery sets.

## HZ12082FC Wiring - LED Enable

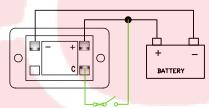

Control pin: connect to the ignition switch via fuse.

## HZ12082FRC Wiring Diagram 0 0 BATTERY +4.5V Output LED Enable Max.2mA 2 Large load Regulator 10K Ω Sample Application

## C (LED Enable):

When terminal C is applied and pin +&connected, instrument works, but LED doesn't display. LED is enabled by connecting terminal C to high voltage (e.g. illumination switch).

R (+4.5V Output, lockout): R terminal has +4.5V output, and it cuts off the output when instrument detects that the battery is empty when #1&2 LED flash in turns